 




INSTALLATION

CHECK DIRECTION OF FLOW INDICATORS ON CARTRIDGES

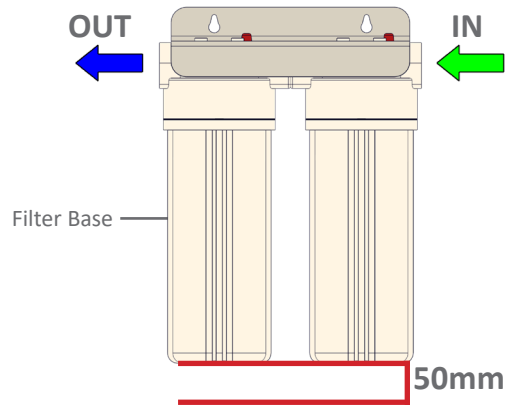


1. mark positions of the mounting bracket on the wall, ensuring there is 50mm of clearance at the base for filter replacement. Secure to vertical surface.

  
2. Fit inlet and outlet water connections to **COLD** water only.

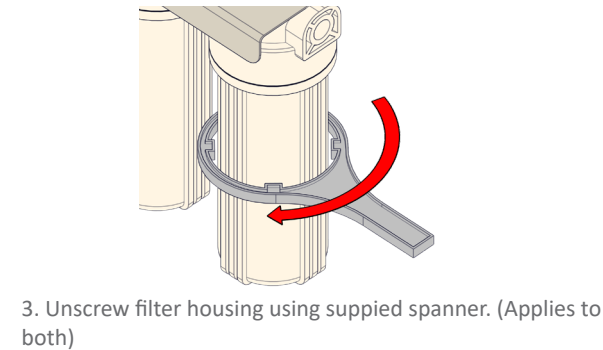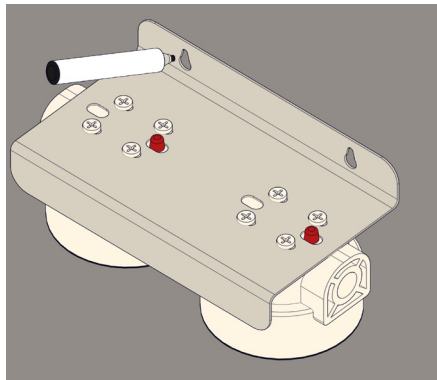

 3. Unscrew filter housing using supplied spanner. (Applies to both)

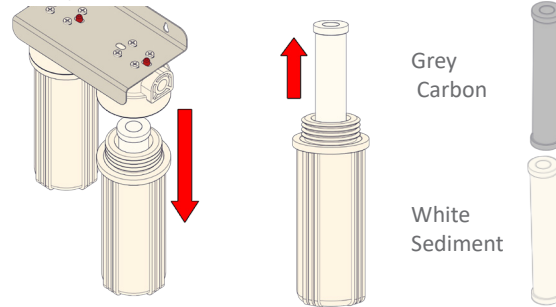

 4. Remove Cartridge filter from filter housing base and remove **PLASTIC WRAP**. (ensure this is done for both **WHITE SEDIMENT** cartridge and **GREY CARBON** cartridge)

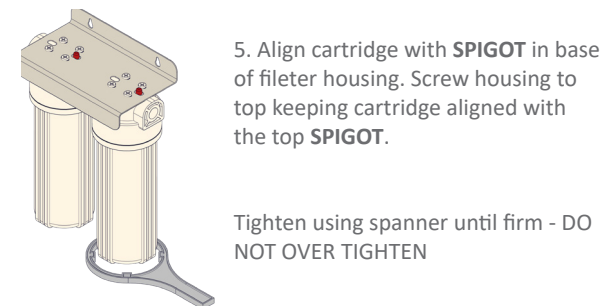

5. Align cartridge with **SPIGOT** in base of filter housing. Screw housing to top keeping cartridge aligned with the top **SPIGOT**.

Tighten using spanner until firm - **DO NOT OVER TIGHTEN**

WARNING:

Installation for these filter housings onto mains water supplies should be done by a licensed plumber.

Turn off water supply before commencing work.

Fit inlet connections to **COLD** water only.

Housings are supplied with a filter cartridge inside. Remove the filter cartridge plastic wrap before installation

For correct operation of this appliance it is essential to observe the manufacturer's instructions.

-Suitable for domestic drinking supply.
-Maximum Operation Pressure: 500KPa

*It is advisable to fit a shut-off valve before the inlet housing to assist with changing cartridges.



recommended working pressure

150-500KPa

maximum hot water temperature



75 degrees

NOTE:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:
 - Gravity-fed water systems

- Some instantaneous hot water systems; or
 - Pressure supply less than 150kPa;
- NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:

 
 
 
 
- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.

FILTER CARTRIDGE REPLACEMENT

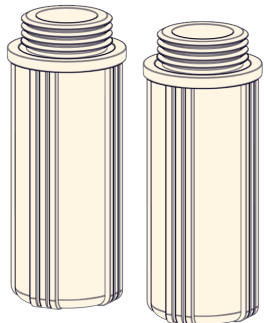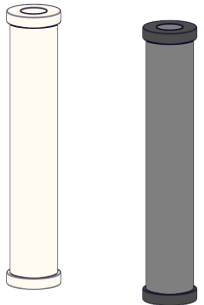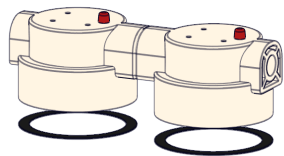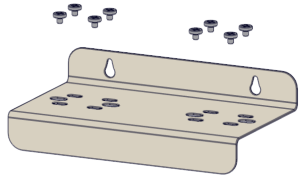

1. Turn off water supply.
2. Turn on tap to release pressure.
3. Working on one housing at a time, slowly unscrew base of housing with wrench.
4. Lower filter housing away from top - careful not to spill water.

5. Remove cartridge and tip out water.
6. Wipe out inside of housing to remove dirt.
7. Insert new cartridge and align with spigot in the base.

8. Align base and cartridge with the top.
9. Screw base to top, keeping the cartridge aligned with the top **SPIGOT**.

10. Hand tighten until firm - DO NOT OVER TIGHTEN.
11. Close tap.
12. Turn on water supply.
13. GENTLY turn on tap to allow water to fill the housing.
14. Allow the tap to flow for one minute.

15. The filters will require time to become fully saturated and during this time the water will be cloudy, this is normal.

16. Close tap and check for leaks.

To maintain healthy, high quality water, it is good practice to replace the filters every 6 months, or every 3 months if you live in an area that has a high concentration of particulates in the water.

*It is advisable to fit a shut-off valve near to the inlet housing to assist with changing cartridges.

REPLACEMENT FILTER CARTRIDGES

Post to:
Phoenix Tapware
926 Mountain Highway
Bayswater Victoria, 3153

Name: _____
Address: _____
State: _____
Postcode: _____
Phone: _____
Email: _____

For Replacement cartridges contact your nearest Reece outlet or refer to the Phoenix website for Distributor details.
Quote code: PS701 and PS702



recommended working pressure

150-500kPa

maximum hot water temperature



75 degrees

NOTE:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:
 - Gravity-fed water systems

- Some instantaneous hot water systems; or
 - Pressure supply less than 150kPa;
- NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:

- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.