

ocean

BATHROOM

Installation Instructions – Bath


WARNING – Bath **MUST** be fully inspected before installation , once installed no claims for scratches or chips will be excepted.

Please fully inspect bath prior to installation and ensure instructions are followed.

After bath is installed it is imperative the surface of the bath is protected to avoid scratched and damage while bathroom is under construction

Waste Outlet

Fit waste outlet to base prior to installation of the base, it is recommended a bead of silicone is run on the underside of the waste flange to ensure a watertight seal between the waste and the bath surface.

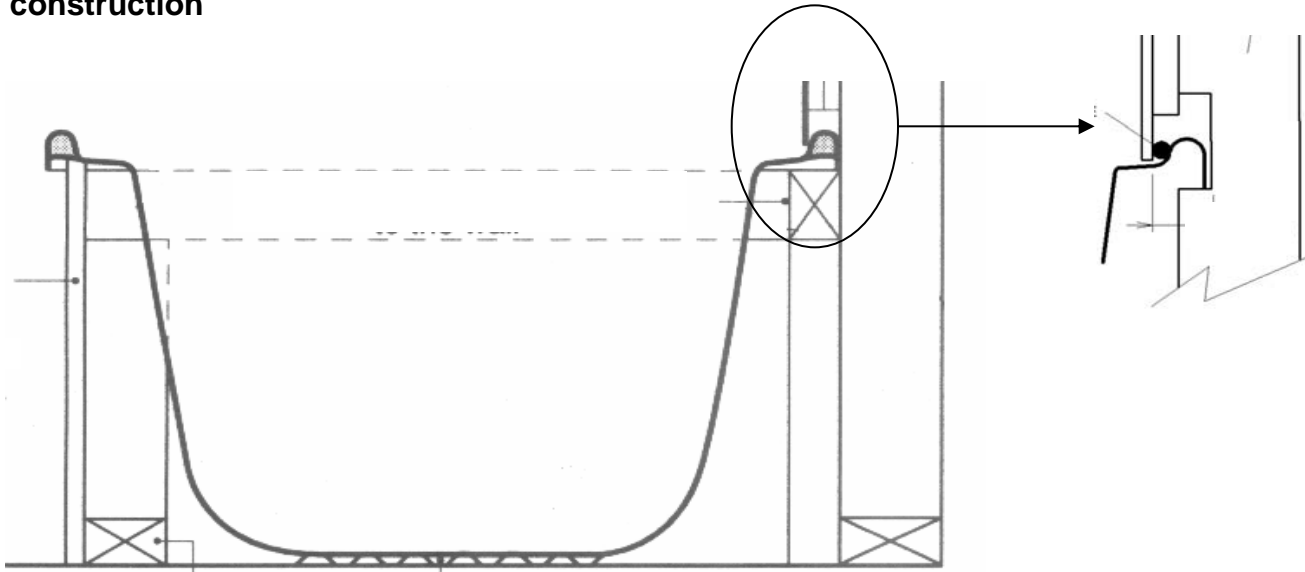

Bath must be fully supported at all times, it is **not** a self supporting bath. Failure to fully support bath will void warranty.

All of the support pads on the underside of the bath **MUST** be sitting on a firm foundation. A generous bead of silicone can be applied to the supports on the underside of bath , ensure good and firm contact with the ground. Allow sufficient time for silicone to cure before proceeding with wall lining installation.

If the floor is not level bath can be installed on a 4 ; 1 mortar mix to ensure correct support.

Water temperature cannot exceed 50 degree Celsius as this can cause damage to the acrylic surface area.